



ENERGY STORAGE
PARTNER PROGRAM



NEC & Morningstar

Introduction:

With over four million sold since 1993, Morningstar is recognized as the expert in charging technology throughout the solar industry. As solar-plus-storage becomes more prevalent in mainstream installations, battery chemistries are becoming more advanced—and battery makers are increasingly looking for ways to help their customers maintain and protect their long-term investment.

Morningstar's *Energy Storage Partner Program™* (ESP) makes it possible for selected premium battery partners to offer additional value and support for their customers by offering them a more proven, better documented and controlled storage system. With energy storage typically accounting for a very large share of the overall system's cost, ESP helps advanced chemistry battery manufacturers to provide the maximum level of assurance that system owners and operators need. This document is intended to provide essential information and recommendations for integrating Morningstar charge controllers with the Energy Storage Partner's batteries. Proper integration of these products is dependent upon successful implementation of the custom settings outlined in the sections below. These settings are the result of cooperation between manufacturers and have been agreed upon by both parties.

Battery Overview:

The NEC Energy Solutions ALM family of advanced lithium-ion batteries delivers exceptional performance, long service life, and robust safety for tough, critical applications. Available in a variety of standard sizes, the ALM family offers up to twice the usable energy, 50X greater cycle life, and much faster charging than typical lead-acid batteries. The ALM family incorporates NEC Energy Solutions EverSafe™ Battery Technology, with protection at the cell, battery, and system level. The ALM12V35 is a line of 35Ah batteries available in standard (s), intelligent (i), and High Power (HP) series to match application requirements. The ALM i-Series offer integrated CAN or SMBus communications for access to critical battery status, usage tracking, State of Charge (SOC), run time to empty, and other parameters.

Morningstar controllers have been used to regulate battery charging in a wide variety of battery types over the last several decades. The proprietary software and innovative features associated with these controllers, results in greater energy harvest and prolonged battery life. All Morningstar controllers are equipped with electronic and environmental protections and the robust Morningstar product portfolio accommodates virtually any off-grid solar application.

Systems incorporating both ALM 12V35 batteries and Morningstar charge controllers are well suited to a wide range of PV+Storage applications. The information in the application note is intended as a guide to help configure settings on various Morningstar controllers to charge NEC Energy Solutions ALM 12V35 batteries. Performance may vary depending on use conditions and application.



NEC Energy Solutions ALM 12V35 Batteries

Models: ALM 12V35 Family of 12 Volt Batteries ([See data sheet for safety information](#))

Battery Chemistry: Lithium-Ion: Lithium Nanophosphate® (LiFePO4)

BMS: EverSafe™ battery technology. Protection at the cell, battery and system level

Charging Details:

Regulation Voltage Range: 13.6-14.4 V (14.4V recommended)*

High Voltage Disconnect: 16V or adjustable

Max. Charger Overvoltage Protection (no damage): 60 V

Terminal Cut-Off Voltage: 9.8 V (Typical)

Under-voltage Limit (Absolute Min. Terminal Cut-Off Voltage): 8 V

Max. Continuous Charge Current: 105A (210 A for 12V35i HP model)

Operating Temperature Range: -40°C to + 60°C

Temperature compensation: To prevent undercharged batteries in warm conditions or over-voltage in cold conditions do not use controllers without disabling temperature compensation.

**Note about Absorption Regulation Voltage range: Lower regulation voltages will take longer to reach full SOC.*



The wide regulation voltage range and low cut-off voltage limit are unique to the ALM family lithium-ion batteries. Another advantage is the cell-level overvoltage protection which allows the battery to continue charging without disconnecting from the controller.

Cold Temperature max recommended current

Temp (°C)	Max. Charge Rate Do not exceed	Discharge Current Limit > 1 minute loads	Discharge Current Limit < 1 minute loads
-40°C	.5A	2.1A	12A†
-30°C	1.75A	3.4A	18A†
-20°C	7A	7.6A	33A†
-10°C	10.5A	17.8A†	52A†
0°C	17.5A	52.5A†	>60A†
10°C	35A	>60A†	>60A†

For charge acceptance, do not exceed the limits specified. Charging at higher rates may cause result in engaging the ALM 12V35's protection circuitry to engage or result in shorter battery life.

Max. discharge current to prevent early LVD trips is based on the following Low Voltage Disconnect (LVD) settings.

LVD = 12.75V (with 1 minute delay) LVD current compensation = -10mV/A. Instant LVD @ 10V

†Note - or < max. load current rating of controller.

The ALM 12V35 Family of 12 Volt Batteries have a limited five year warranty and are sold exclusively pursuant to NEC Energy Solutions, Inc. terms and conditions. Additional information available upon request.



ENERGY STORAGE
PARTNER PROGRAM



Recommended products by Morningstar:

12-24V systems:

ProStar MPPT (includes low temperature foldback to limit the max. charge current)

SunSaver MPPT

ProStar (PWM) Gen 3 (includes low temperature foldback to limit the max. charge current)

12-48V systems:

TriStar MPPT (compatible with 12V, 24V, 36V and 48V nominal systems)

TriStar MPPT 600V (compatible with 12V, 24V, 36V and 48V nominal systems)

TriStar (PWM) model TS-45 (compatible with 12V, 24V, 36V and 48V nominal systems)

Communications hardware required for programming Custom Settings with MSView:

ProStar MPPT, ProStar (Gen 3), SunSaver MPPT

UMC-1 USB MeterBus Adapter <http://www.morningstarcorp.com/products/usb-meterbus-adapter/>

MSC PC RS-232 MeterBus Adapter- <http://www.morningstarcorp.com/products/pc-meterbus-adapter/>

EMC-1 Ethernet MeterBus Converter- <http://www.morningstarcorp.com/products/ethernet-meterbus-converter/>

TriStar, TriStar MPPT, TS-MPPT-600V

Includes an RS-232 port for connection to a PC.

EMC-1 Ethernet MeterBus Converter- <http://www.morningstarcorp.com/products/ethernet-meterbus-converter/>

Tripp Lite U209-000-R USB / Serial DB-9 (RS-232) Adapter Cable (not available from Morningstar)

All TS-MPPT-60 (150V and 600V) models also include an Ethernet port and EIA-485 port.

MSView Software Download: <http://www.morningstarcorp.com/msview/>

MSView Controller settings configuration files:

<http://www.morningstarcorp.com/wp-content/uploads/2017/02/NEC-Custom-Settings-Config-Files.zip>



MORNINGSTAR
World's Leading Solar Controllers & Inverters

Copyright 2018 Morningstar Corporation/All Rights Reserved

Page 3



Recommended Settings; Morningstar Custom Settings Basic Setup Overview:

Absorption Voltage Settings: 13.6-14.4 V (14.4V recommended)

Disable Float: No Float setting needed. Batteries can stay in Absorption indefinitely. Custom settings required.

No Equalization required: Equalization is handled by the ALM BMS internally. Auto-Equalize can be disabled with many Morningstar products using DIP Switches or completely disabled with custom settings.

Disable temperature compensation: Temperature compensation is typically not used with Lithium batteries. This can be disabled by not connecting the remote temperature sensor for the TriStar and TriStar MPPT controllers or with custom settings. Note: Since it is possible to disable the Temperature Compensation by not installing a Remote Temperature Sensor (RTS) with the TriStar and TriStar MPPT controllers it is possible to use the TriStar and TriStar MPPT controllers with some of the factory presets instead of using custom settings. However, the default Float voltage settings might not be considered optimal with ALM family batteries.

ProStar MPPT – Models PS-MPPT-25, PS-MPPT-25M, PS-MPPT-40, PS-MPPT-40M

It is not recommended to use any of the factory presets with the ProStar MPPT controllers.

Set DIP Switches 2&3 for 12V (2 OFF, 3 ON), 24V (2 ON, 3 OFF) or auto-detect nominal voltage with Switches 2&3 DOWN/OFF.

ProStar MPPT Custom Options: Using MSView ProStar MPPT Setup Wizard

Set DIP Switches for Custom Settings (Switches 4,5&6 UP/ON)


- Absorption Voltage14.4 V
- Absorption Time..... 1 hr
- Enable Absorption Extension Not Required
- Battery Temperature Compensation..... 0.0 V/°C (Disabled)
- Low Temperature Foldback See below
- Charge Mode – Float Settings
- Enable Float Optional
- Float Voltage14.4V
- Float Timeout 60 min
- Enable Float Cancel Not Required
- Charge Mode – Equalize and HVD Settings
- Equalize Do not Enable
- Enable Battery HVD Not Required (Charging HVD)
- Enable Maximum Regulation Limit Not Required
- Maximum Regulation Limit Not Required
- Enable Battery Current Limit Optional
- Battery Current Limit Optional
- Load Settings
- Low Voltage Disconnect12.75V



- Low Voltage Reconnect 13.3V
- Delay Before LVD1 m (possibly higher for cold temperatures)
- Load Current Compensation 0.01 Ω s (V/A) (reduces LVD Voltage with larger loads)
- Enable HVD/ High Voltage Disconnect/Reconnect..... Enable/14.9V/14.0V (Load HVD)
- LED transition voltages (Green Only - Green and Yellow)... 13.9V
- LED transition voltages (Green and Yellow - Yellow Only)... 13.5V
- LED transition voltages (Yellow Only - Yellow and Red)..... 13.2V
- LED transition voltages (Yellow and Red – Red Only)..... 12.8V

* Settings will multiply to achieve the nominal battery voltage (1=12V, 2=24V).

Another unique setting with the ProStar MPPT controllers is the setting for the Low Temperature Foldback. The NEC Energy Solutions ALM12V35 battery includes a table of max. charging current levels for low battery cell temperatures. The graph below displays the maximum current in blue with a custom programmed Low Temperature Foldback for the PS-MPPT-25 controller. This will allow the controller to continue to operate when the battery is exposed to low temperatures as measured with the RTS and allows it to recover the battery operation during low temperature conditions.

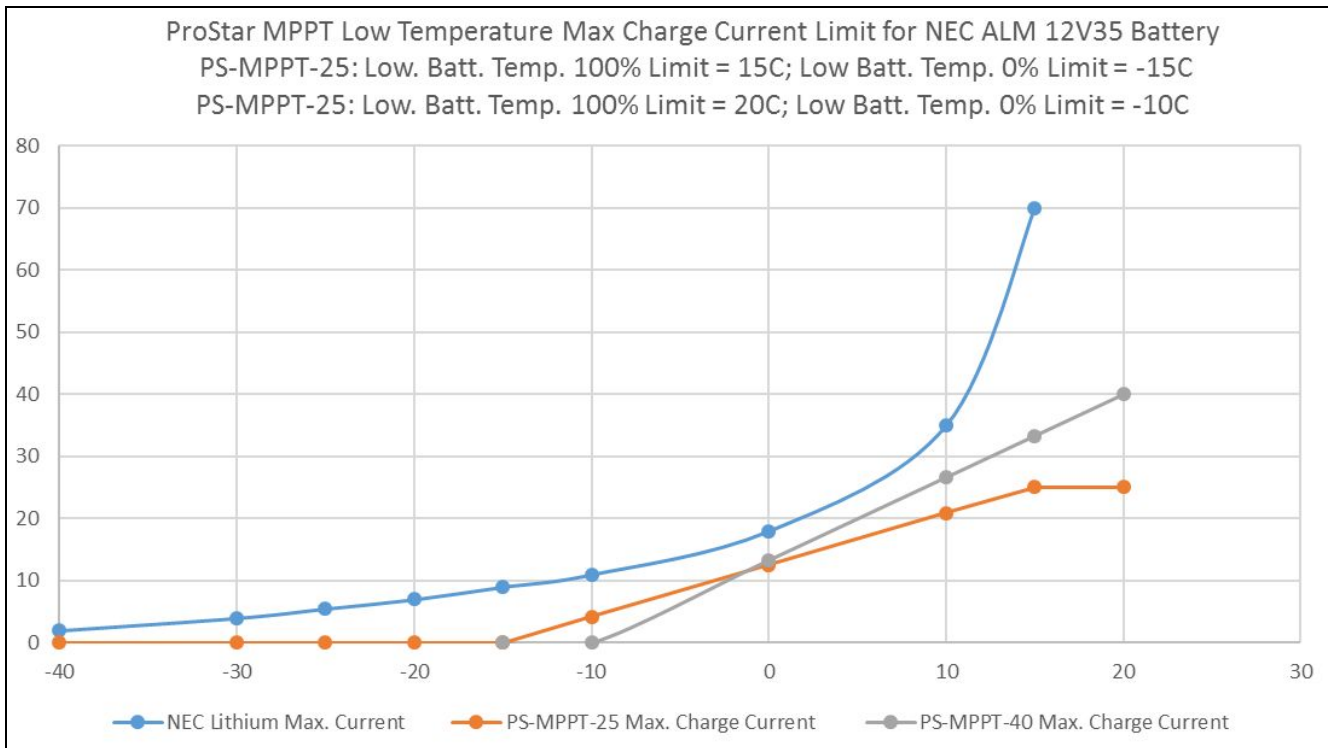

ProStar MPPT model PS-MPPT-25M Low Temp. Foldback Custom Settings.
 Low Battery Foldback High Limit = 15°C
 Low Battery Foldback Low Limit = -15°C



ProStar MPPT model PS-MPPT-40M Low Temp. Foldback Custom Settings.

Low Battery Foldback High Limit = 20°C

Low Battery Foldback Low Limit = -10°C

Please note that at this time custom settings for temperature Limits less than 0°C can only be programmed with the Meter Display version of the ProStar MPPT models PS-MPPT-25M and PS-MPPT-40M. All other settings can first be programmed using MSView or with the Meter Display.

Caution: RTS temperature readings may not always equal minimum battery cell temperatures.

SunSaver MPPT – Model SS-MPPT-15L

It is not recommended to use any of the factory presets with the SunSaver MPPT controllers.

For 24 volt systems, the battery voltage must be greater than 15.5 volts to properly detect a 24V battery. The 12/24 volt battery detection is automatic and the check is only performed at start-up.

SunSaver MPPT Custom Options: Using MSView SunSaver MPPT Setup Wizard

Set DIP Switch for Custom Settings: (Switch 1 ON/UP)

Important: Charge Setting 1 (Jumper inserted) and Charge Setting 2 (Jumper removed): Program both with compatible settings to prevent the possibility of any problems.

Absorption Voltage 14.4 V

Disable Float..... Checked (Optional)

Disable Equalize Checked

Shared Charge Settings

Battery Temperature Compensation..... 0.0 V/°C (Disabled)

Load Settings

Low Voltage Disconnect (LVD) 12.75V

Low Voltage Reconnect (LVR) 13.3V

Delay Before LVD 1 m (possibly higher for cold temperatures)

Load Current Compensation 0.01 Ω s (V/A) (reduces LVD Voltage based on size of load)

Enable HVD/ High Voltage Disconnect/Reconnect..... Enable/14.9V/14.0V (Load HVD)

Misc Settings/LED Transition Settings (Suggestions)

LED Rising transition voltage (Yellow - Green) 13.9V

LED Falling transition voltage (Green - Yellow) 13.5V

LED Rising transition voltage (Red - Yellow) 13.2V

LED Falling transition voltage (Yellow - Red) 12.8V

** Settings will multiply to achieve the nominal battery voltage (1=12V, 2=24V).*

TriStar MPPT (150V) – Models TS-MPPT-30, TS-MPPT-45 and TS-MPPT-60

Set DIP Switches 2&3 for 12V (2 OFF, 3 ON), 24V (2 ON, 3 OFF) or 48V (2 ON, 3 ON) or auto-detect nominal voltage with Switches 2&3 DOWN/OFF. Load Control not included. See Load Control Options Section below.

Disable temperature compensation. Temperature compensation is typically not used with Lithium batteries.

Disable temperature compensation by not connecting the RTS or with custom settings.



Preset Options

Set DIP Switches 4,5&6 are used to select the battery charging settings. The following Presets with no RTS connected are viable solutions.

Settings Switches 4 - 5 - 6	Battery Type	Absorp. Stage (Volts)	Float Stage (Volts)	Equalize Stage (Volts)	Absorp. Time (Minutes)	Equalize Time (Minutes)	Equalize Interval (Days)
off-off-off	1 - Gel	14.00	13.70		150		
off-off-on	2 - Sealed*	14.15	13.70	14.40	150	60	28
off-on-off	3 - Sealed*	14.30	13.70	14.60	150	60	28
off-on-on	4 - AGM/Flooded	14.40	13.70	15.10	180	120	28
on-off-off	5 - Flooded	14.60	13.50	15.30	180	120	28
on-off-on	6 - Flooded	14.70	13.50	15.40	180	180	28
on-on-off	7 - L-16	15.40	13.40	16.00	180	180	14
on-on-on	8 - Custom	Custom	Custom	Custom	Custom	Custom	Custom

* "Sealed" battery type includes gel and AGM batteries

Table 4-1. Battery charging settings for each selectable battery type

Shared Settings	Value	Units
Absorption Extension Voltage	12.50	Volts
Absorption Extension Time	Absorption Time + 30	minutes
Float Exit Timeout	60	minutes
Float Cancel Voltage	11.50	Volts
Equalize Timeout	Equalize Time + 60	minutes
Temperature Compensation Coefficient*	- 5	millivolts / °C / cell

* 25°C reference

Table 4-2. Battery settings that are shared between all battery types

TriStar MPPT Custom Options: Using MSView TriStar MPPT Setup Wizard

Set DIP Switches for Custom Settings (Switches 4,5&6 UP/ON)

Charge Mode – Absorption, Temp Comp, & Reminder

Absorption Voltage14.4 V

Absorption Time..... 1 hr

Enable Absorption Extension Not Required

Battery Temperature Compensation..... 0.0 V/°C (Disabled)

Battery Service Reminder..... Not Required

Charge Mode – Float Settings

Enable Float Not Required

Float Voltage 13.6-14.4V (If enabled)

Float Timeout 60 min

Enable Float Cancel Not Required

Charge Mode – Equalize & HVD Settings

Equalize Do not Enable

Enable Battery HVD Not Required

Enable Maximum Regulation Limit Not Required

Enable Battery Current Limit Optional

Battery Current Limit Optional

LED transition voltages (Green Only - Green and Yellow)... 13.9V

As indicated in battery charging settings table the first four Presets are compatible with ALM 12V35 batteries (1- Gel; 2- Sealed*; 3- Sealed*; 4- AGM/Flooded). Setting 4 is the most optimal setting for fastest charging.

Set DIP Switch 7 UP to Enable Auto-Equalize with Battery Type 2- Sealed if desired. Battery types 3- Sealed and 4- AGM/Flooded should have DIP Switch 7 DOWN/OFF to disable Auto-Equalize since the Equalize voltage exceeds the max. Voltage for the ALM 12V35 battery.



LED transition voltages (Green and Yellow - Yellow Only).. 13.5V

LED transition voltages (Yellow Only - Yellow and Red)..... 13.2V

LED transition voltages (Yellow and Red – Red Only)..... 12.8V

* Settings will multiply to achieve the nominal battery voltage (1=12V, 2=24V, 4=48V).

TriStar (PWM) – Models TS-45 and TS-60

Set DIP Switches 2&3 for 12V (2 OFF, 3 ON), 24V (2 ON, 3 OFF) or 48V (2 ON, 3 ON) or auto-detect nominal voltage with Switches 2&3 DOWN/OFF. Load Control not included. See Load Control Options Section below.

Disable temperature compensation. Temperature compensation is typically not used with Lithium batteries.

Disable temperature compensation by not connecting the RTS and/or with custom settings.

See manual for more information regarding the TriStar (PWM) controller.

ProStar Gen 3 (PWM) – Models PS-15, PS15M, PS30, PS30M

Use ProStar MPPT settings. The new ProStar Gen 3 also includes Low Temperature Foldback settings.

Load Control Options (for controllers which do not include load control)

Options for providing DC Load Control for TriStar MPPT and TriStar solar controllers.

Add DC Load control with TriStar (PWM) controller or with Relay Driver and relay. Many inverters include LVD settings that are adjustable. Load control should include high voltage protection in case there is a battery cell overvoltage condition which could deliver a high voltage to the load. The TriStar controller include high voltage protection for loads. This can be provided with one of the channels of the Relay Driver but may not be fast enough to protect against voltage surges. The ProStar MPPT and new ProStar Gen 3 are the only controllers which include Cold Temperature foldback to reduce max. charge current based on battery RTS (sense) temperature. It is possible to use one of the channels of a Relay Driver to disable charging based on RTS temperature or ambient temperature.

IMPORTANT:

NEC Energy Solutions and Morningstar Corporation are separate companies with unaffiliated ownership.

Neither NEC Energy Solutions, Inc. nor Morningstar Corporation make any warranties explicit or implied with this product information. Morningstar makes no representation or assumption of liability regarding the charging requirements for any type of battery or model.

Some of the material being presented may be based on information that has been provided by other parties such as battery specs and operational parameters.

Performance may vary depending on use conditions and application.